

Operating Instructions/ Bedienungsanleitung/ Manuel d'utilisation/ Instrucciones de funcionamiento

INTERCHANGEABLE LENS FOR DIGITAL CAMERA

WECHSELOBJEKTIV FÜR DIGITAL-KAMERA

OBJECTIF INTERCHANGEABLE POUR APPAREIL PHOTO NUMÉRIQUE

ÓPTICA INTERCAMBIABLE PARA CÁMARA DIGITAL

Model No./Model Nr./Modèle/Modelo N.

H-E08018



DVQX1250ZC
F0317KD2022



LEICA
DG VARIO-ELMARIT



Manufactured by:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Moriguchi City, Osaka, Japan

Importer for UK:
Panasonic UK, a branch of Panasonic Marketing Europe GmbH
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT
Importer for EU:

Panasonic Marketing Europe GmbH
Authorized Representative in EU:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburg, Germany

Hergestellt von:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Moriguchi City, Osaka, Japan

Importeur:
Panasonic Marketing Europe GmbH
Vertretungsberechtigter in der EU:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburg, Deutschland

Fabriqué par:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, ville de Moriguchi, Osaka, Japon

Importateur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabricado por:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Ciudad de Moriguchi,
Osaka, Japón

Importador:
Panasonic Marketing Europe GmbH
Representante Autorizado para la UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburgo, Alemania

Importeur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabriqué par:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, ville de Moriguchi, Osaka, Japon

Importateur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabricado por:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Ciudad de Moriguchi,
Osaka, Japón

Importador:
Panasonic Marketing Europe GmbH
Representante Autorizado para la UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburgo, Alemania

Importeur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabriqué par:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, ville de Moriguchi, Osaka, Japon

Importateur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabricado por:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Ciudad de Moriguchi,
Osaka, Japón

Importador:
Panasonic Marketing Europe GmbH
Representante Autorizado para la UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburgo, Alemania

Importeur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabriqué par:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, ville de Moriguchi, Osaka, Japon

Importateur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabricado por:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Ciudad de Moriguchi,
Osaka, Japón

Importador:
Panasonic Marketing Europe GmbH
Representante Autorizado para la UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburgo, Alemania

Importeur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabriqué par:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, ville de Moriguchi, Osaka, Japon

Importateur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabricado por:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Ciudad de Moriguchi,
Osaka, Japón

Importador:
Panasonic Marketing Europe GmbH
Representante Autorizado para la UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburgo, Alemania

Importeur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabriqué par:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, ville de Moriguchi, Osaka, Japon

Importateur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne





Fabricado por:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, Ciudad de Moriguchi,
Osaka, Japón

Importador:
Panasonic Marketing Europe GmbH
Representante Autorizado para la UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hamburgo, Alemania

Importeur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

Fabriqué par:
Panasonic Entertainment & Communication Co., Ltd.
1-10-12, Yagumo-higashi-machi, ville de Moriguchi, Osaka, Japon

Importateur:
Panasonic Marketing Europe GmbH
Représentant autorisé dans l'UE:
Panasonic Testing Centre
Winsbergiring 15, 22525 Hambourg, Allemagne

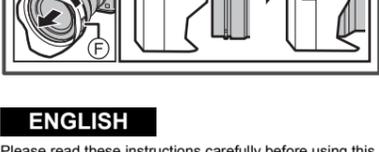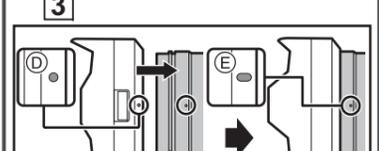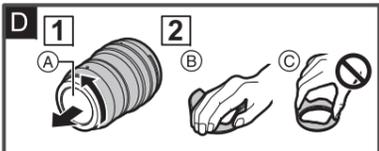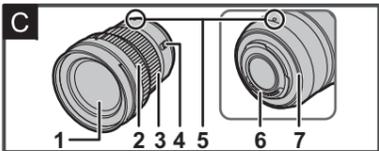

ENGLISH

Please read these instructions carefully before using this product, and save this manual for future use.

Disposal of Old Equipment
Only for European Union and countries with recycling systems

This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products must not be mixed with general household waste. For proper treatment, recovery and recycling of old products, please take them to applicable collection points in accordance with your national legislation. By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment. For more information about collection and disposal, please contact your local municipality. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Information for Your Safety

Keep the unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games, radio transmitters, high-voltage lines etc.).

Do not use the camera near cell phones because doing so may result in noise adversely affecting the pictures and sound.

If the camera is adversely affected by electromagnetic equipment and stops functioning properly, turn the camera off and remove the battery and/or the connected AC adaptor. Then reconnect the battery and/or reconnect the AC adaptor and turn the camera on.

The lens can be used with a digital camera compatible with the lens mount standard for the "Micro Four Thirds™ System".

It cannot be mounted on the Four Thirds™ mount specification camera.

The appearance and specifications of products described in this manual may differ from the actual products you have purchased due to later enhancements.

Micro Four Thirds™ and Micro Four Thirds Logo marks are trademarks or registered trademarks of Olympus Corporation, in Japan, the United States, the European Union and other countries.

G MICRO SYSTEM is an interchangeable lens type digital camera system of LUMIX based on a Micro Four Thirds System standard.

LEICA is a registered trademark of Leica Microsystems IR GmbH. ELMARIT is a registered trademark of Leica Camera AG. The LEICA DG lenses are manufactured using measurement instruments and quality assurance systems that have been certified by Leica Camera AG based on the company's quality standards.

Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

Precautions

Lens Care

This lens has a dust-proof and splash-proof construction. When using it, please be careful of the following. If the lens is not working properly, consult the dealer or your nearest Service Centre.

Please attach the lens to a dust-proof and splash-proof digital camera.

When attaching or removing the lens, be careful so that foreign materials such as sand, dust, and water droplets do not adhere to or enter the lens mount rubber, contact points, digital camera and lens.

This lens is not waterproof and cannot be used to record underwater. For splash-proofing, the lens is constructed to resist the entry of water. If splashes of water etc. do adhere to the lens, wipe after use with a soft dry cloth.

To improve the dust-proofing and splash-proofing of this lens, a lens mount rubber is used in the mounting portion. After changing the lens a number of times, you may find that the lens mount rubber has marked the mount portion of the digital camera body, which does not affect its performance. For information on changing the lens mount rubber, contact your nearest Service Centre.

Do not press the lens with excessive force.

When there is dirt (water, oil, and fingerprints, etc.) on the surface of the lens, the picture may be affected. Lightly wipe the surface of the lens with a soft, dry cloth before and after taking pictures.

To prevent dust and other particles from accumulating on or entering the lens, attach the lens rear cap when the lens is not in use.

To protect the lens contact points, do not place the lens with its mount surface facing down. In addition, do not allow the lens contact points to become dirty. (See illustration A)

About Condensation (Fogging of the Lens)

Condensation occurs when the ambient temperature or humidity changes. Please be careful, as it may cause the lens to become dirty and lead to mould and malfunctioning.

If condensation occurs, turn the power off and leave it for about two hours. Once the camera acclimatizes to the surrounding temperature the condensation will go away naturally.

Supplied Accessories

Product numbers correct as of April 2017. These may be subject to change.

1 Lens Pouch
2 Lens Cap
3 Lens Rear Cap
4 Lens Hood

The lens rear cap and lens cap are attached to the interchangeable lens at the time of purchase.

Names and Functions of Components

1 Lens surface
2 Focus ring
3 Zoom ring
4 [AF/MF] switch

This allows you to switch between Auto Focus (AF) and Manual Focus (MF).

When either the [AF/MF] switch of the lens or the setting of the camera is set to [MF], Manual Focus (MF) is enabled.

Lens fitting mark
Contact points
Lens mount rubber

Note

When recording on the wide-angle side and using the flash, the periphery of the screen may darken. In such cases, we recommend using the external flash.

If you zoom after focusing, focusing errors may occur. After zooming, please perform the focusing again.

In very quiet situations Auto Focus operating sounds may be recorded during motion picture recording. This is not a malfunction. In such situations, switching to Manual Focus will improve the situation.

Attaching/Detaching the Lens

For information on how to attach and remove the lens, refer to the operating instructions for your digital camera.

Before attaching or detaching the lens, check that the digital camera is turned off.

Before attaching the lens to the digital camera, remove the lens rear cap (A) by rotating it in the direction of the arrow. (See illustration 1)

To prevent dust and other particles from accumulating on or entering the lens, be sure to attach the lens cap/lens rear cap after detaching the lens from the digital camera.

Attaching Filters

If you use two or more filters at the same time, part of a recorded image may darken.

It is possible to attach the lens cap with the filter already attached.

When using the lens hood and a filter at the same time, attach the filter first.

You cannot attach a conversion lens or adaptor to this lens. A filter may be used, but attaching any other element may cause damage to the lens.

Attaching the Lens Hood (Supplied Accessory)
(See illustration 2/3)

Hold the lens hood with your fingers placed as shown in the picture (B).

Do not hold the lens hood in a way that twists or bends it. (C)

1 Align the mark (D) (E) on the lens hood with the mark on the tip of the lens.

2 Rotate the lens hood in the direction of the arrow until it clicks and then align the mark (F) (G) on the lens hood with the mark on the tip of the lens.

Removing the lens hood (See illustration 4)
Rotate the lens hood in the direction of the arrow while pushing the button (H) on the lens hood.

Temporarily Storing the Lens Hood
(See illustration 4)

1 Align the mark (I) (J) on the lens hood with the mark on the tip of the lens.

2 Rotate the lens hood in the direction of the arrow until it clicks into place.

Note

When taking pictures with the flash with the lens hood attached, the lower portion of the screen may turn dark and the control of the flash may be disabled because the photo flash may be obscured by the lens hood. We recommend detaching the lens hood.

Cautions for Use

Take care not to drop or knock the lens. Also take care not to put a lot of pressure on the lens.

Take care not to drop the bag that you inserted the lens in as it may strongly shock the lens. The camera may stop operating normally and pictures may no longer be recorded. Also, the lens may be damaged.

When carrying the digital camera with the lens attached, hold both the digital camera and the lens.

When using pesticides and other volatile substances around the camera make sure that they do not get onto the lens.

If such substances get onto the lens they can damage the exterior case or cause the paint to peel.

Do not point the lens at the sun or other strong light sources.

This could cause the lens to collect an excessive amount of light, resulting in fire and malfunction.

Avoid using or storing the lens in any of the following locations as this may cause problems in operation or malfunctioning:

In direct sunlight or on a beach in summer

In locations with high temperatures and humidity levels or where the changes in temperature and humidity are acute

In locations with high concentrations of sand, dust or dirt

Where there is fire

Near heaters, air conditioners or humidifiers

Where water may make the unit wet

Where there is vibration

Inside a vehicle

Refer also to the operating instructions of the digital camera.

When the unit is not going to be used for a prolonged period, we recommend storing with a desiccant (silica gel). Failure to do so may result in performance failure caused by mold, etc. It is recommended that you check the unit's operation prior to use.

Do not leave the lens in contact with rubber or plastic products for extended periods of time.

Do not touch the lens contact point. Doing so can cause failure of the unit.

Do not disassemble or alter the unit.

Do not use while directly touching the lens at low temperatures for a long period of time.

In cold places (environments below 0 °C (32 °F), such as ski slopes), prolonged direct contact with the metal parts of the lens may cause skin injury. Use gloves or similar when using the lens for long periods.

Do not use benzine, thinner, alcohol or other similar cleaning agents to clean the lens glass or exterior cabinet.

Using solvents can damage the lens or cause the paint to peel.

Wipe off any dust or fingerprints with a soft, dry cloth.

Use a dry, dust cloth to remove dirt and dust on the lens mount rubber, zoom ring, or focus ring.

Do not use a household detergent or a chemically treated cloth.

Troubleshooting

A sound is heard when the camera is turned on or off.

A sound is heard from the lens when taking a picture of a bright subject such as when outdoors.

This is the sound of lens or aperture movement and is not a malfunction.

Specifications

Specifications are subject to change without notice.

INTERCHANGEABLE LENS FOR DIGITAL CAMERA
"LEICA DG VARIO-ELMARIT 8-18 mm/F2.8-4.0 ASPH."

Focal length	f=8 mm to 18 mm (35 mm film camera equivalent: 16 mm to 36 mm)
Aperture type	7 diaphragm blades/circular aperture diaphragm
Maximum aperture	F2.8 (Wide) to F4.0 (Tele)
Minimum aperture value	F22
Lens construction	15 elements in 10 groups (1 aspherical ED lens, 3 aspherical lenses, 2 ED lenses, 1 UHR lens)
Nano surface coating	Yes
In focus distance	0.23 m (0.75 feet) to ∞ (from the focus distance reference line)
Maximum image magnification	0.12× (35 mm film camera equivalent: 0.24×)
Optical image stabiliser	Not available
[AF/MF] switch	Available (Switching AF/MF)
Mount	"Micro Four Thirds Mount"
Angle of view	107° (Wide) to 62° (Tele)
Filter diameter	67 mm
Max. diameter	∅73.4 mm (2.9 inch)
Overall length	Approx. 88 mm (3.5 inch) (from the tip of the lens to the base side of the lens mount)
Mass	Approx. 315 g (0.694 lb)
Operating temperature	-10 °C to 40 °C (14 °F to 104 °F)
Dust-proof and splash-proof	Available

DEUTSCH

Bitte lesen Sie diese Anleitung vor der Inbetriebnahme dieses Produkts aufmerksam durch, und bewahren Sie dieses Handbuch für spätere Bezugnahme griffbereit auf.

-Bedeutung des nachstehend abgebildeten Symbols-

Entsorgung von Altgeräten
Nur für die Europäische Union und Länder mit Recyclingsystemen

Dieses Symbol, auf den Produkten, der Verpackung und/oder den Begleitdokumenten, bedeutet, dass gebrauchte elektrische und elektronische Produkte nicht in den allgemeinen Hausmüll gegeben werden dürfen.

Bitte führen Sie alte Produkte zur Behandlung, Aufarbeitung bzw. zum Recycling gemäß den gesetzlichen Bestimmungen den zuständigen Sammelpunkten zu.

Indem Sie diese Produkte ordnungsgemäß entsorgen, helfen Sie dabei, wertvolle Ressourcen zu schützen und eventuelle negative Auswirkungen auf die menschliche Gesundheit und die Umwelt zu vermeiden.

Für mehr Informationen zu Sammlung und Recycling, wenden Sie sich bitte an Ihren örtlichen Abfallentsorgungsdienstleister. Gemäß Landesvorschriften können wegen nicht ordnungsgemäßer Entsorgung dieses Abfalls Strafgebühren verhängt werden.

Informationen für Ihre Sicherheit

Halten Sie das Gerät so weit wie möglich von Geräten und Einrichtungen fern, die elektromagnetische Felder erzeugen (wie Mikrowellengeräte, Fernsehgeräte, Videospielgeräte, Funksender, Hochspannungsleitungen usw.).

Verwenden Sie die Kamera nicht in der Nähe von Mobiltelefonen. Es könnten sonst Bild- und Tonstörungen auftreten.

Wenn die Kamera durch elektromagnetische Felder anderer Geräte gestört wird und Fehlfunktionen auftreten, schalten Sie die Kamera aus. Nehmen Sie den Akku heraus und/oder trennen Sie das Netzadapter ab. Setzen Sie den Akku dann wieder ein und/oder stecken Sie das Netzadapter wieder ein und schalten Sie die Kamera ein.

Das Objektiv kann mit Digitalkameras verwendet werden, deren Objektivfassung mit dem "Micro Four Thirds™ System"-Standard kompatibel ist.

Objektive dieser Ausführung lassen sich nicht auf Kameras mit Four-Thirds™-Bajonett aufsetzen.

Ausstattung und technische Daten der von Ihnen erworbenen Produkte können aufgrund technischer Weiterentwicklungen von der Ausstattung und den technischen Daten der in diesem Handbuch beschriebenen Produkte abweichen.

Micro Four Thirds™ und die für Micro Four Thirds verwendeten Logos sind Markenzeichen oder eingetragene Markenzeichen der Olympus Corporation in Japan, den USA, der EU und anderen Ländern.

Four Thirds™ und die für Four Thirds verwendeten Logos sind Markenzeichen oder eingetragene Markenzeichen der Olympus Corporation in Japan, den USA, der EU und anderen Ländern.

Das G MICRO SYSTEM ist ein Digitalkamerasystem aus der LUMIX-Reihe mit Wechselobjektiven auf Grundlage des Micro-Four-Thirds-Standards.

LEICA ist ein eingetragenes Markenzeichen der Leica Microsystems IR GmbH. ELMARIT ist ein eingetragenes Markenzeichen der Leica Camera AG. Die Herstellung der LEICA DG-Objektive erfolgt unter Verwendung von Messinstrumenten und Qualitätssicherungssystemen, die von der Leica Camera AG auf Grundlage der Qualitätsstandards des Unternehmens zertifiziert wurden.

Andere Namen von Systemen oder Produkten welche in dieser Bedienungsanleitung genannt werden, sind normalerweise Warenzeichen oder eingetragene Warenzeichen der Hersteller dieser Produkte oder Systeme.

Vermeidung von Störungen

Objektivpflege

Dieses Objektiv verfügt über eine staub- und spritzwasserdichte Konstruktion. Bitte achten Sie bei der Verwendung des Objektivs auf folgende Punkte.

Wenn das Objektiv nicht richtig funktioniert, wenden Sie sich an Ihren Händler oder Ihr nächstgelegenes Service-Center.

Bitte bringen Sie das Objektiv an einer staub- und spritzwasserdichten Digital-Kamera an.

Achten Sie beim Anbringen und Entfernen des Objektivs darauf, dass keinerlei Fremdmaterial wie Sand, Staub, Wassertropfen usw. auf das Objektiv gelangen.

Dieses Objektiv ist nicht wasserdicht und kann nicht für Aufnahmen unter Wasser verwendet werden. Zum Spritzwasserschutz ist das Objektiv so konstruiert, dass es dem Eindringen von Wasser standhält. Wenn

